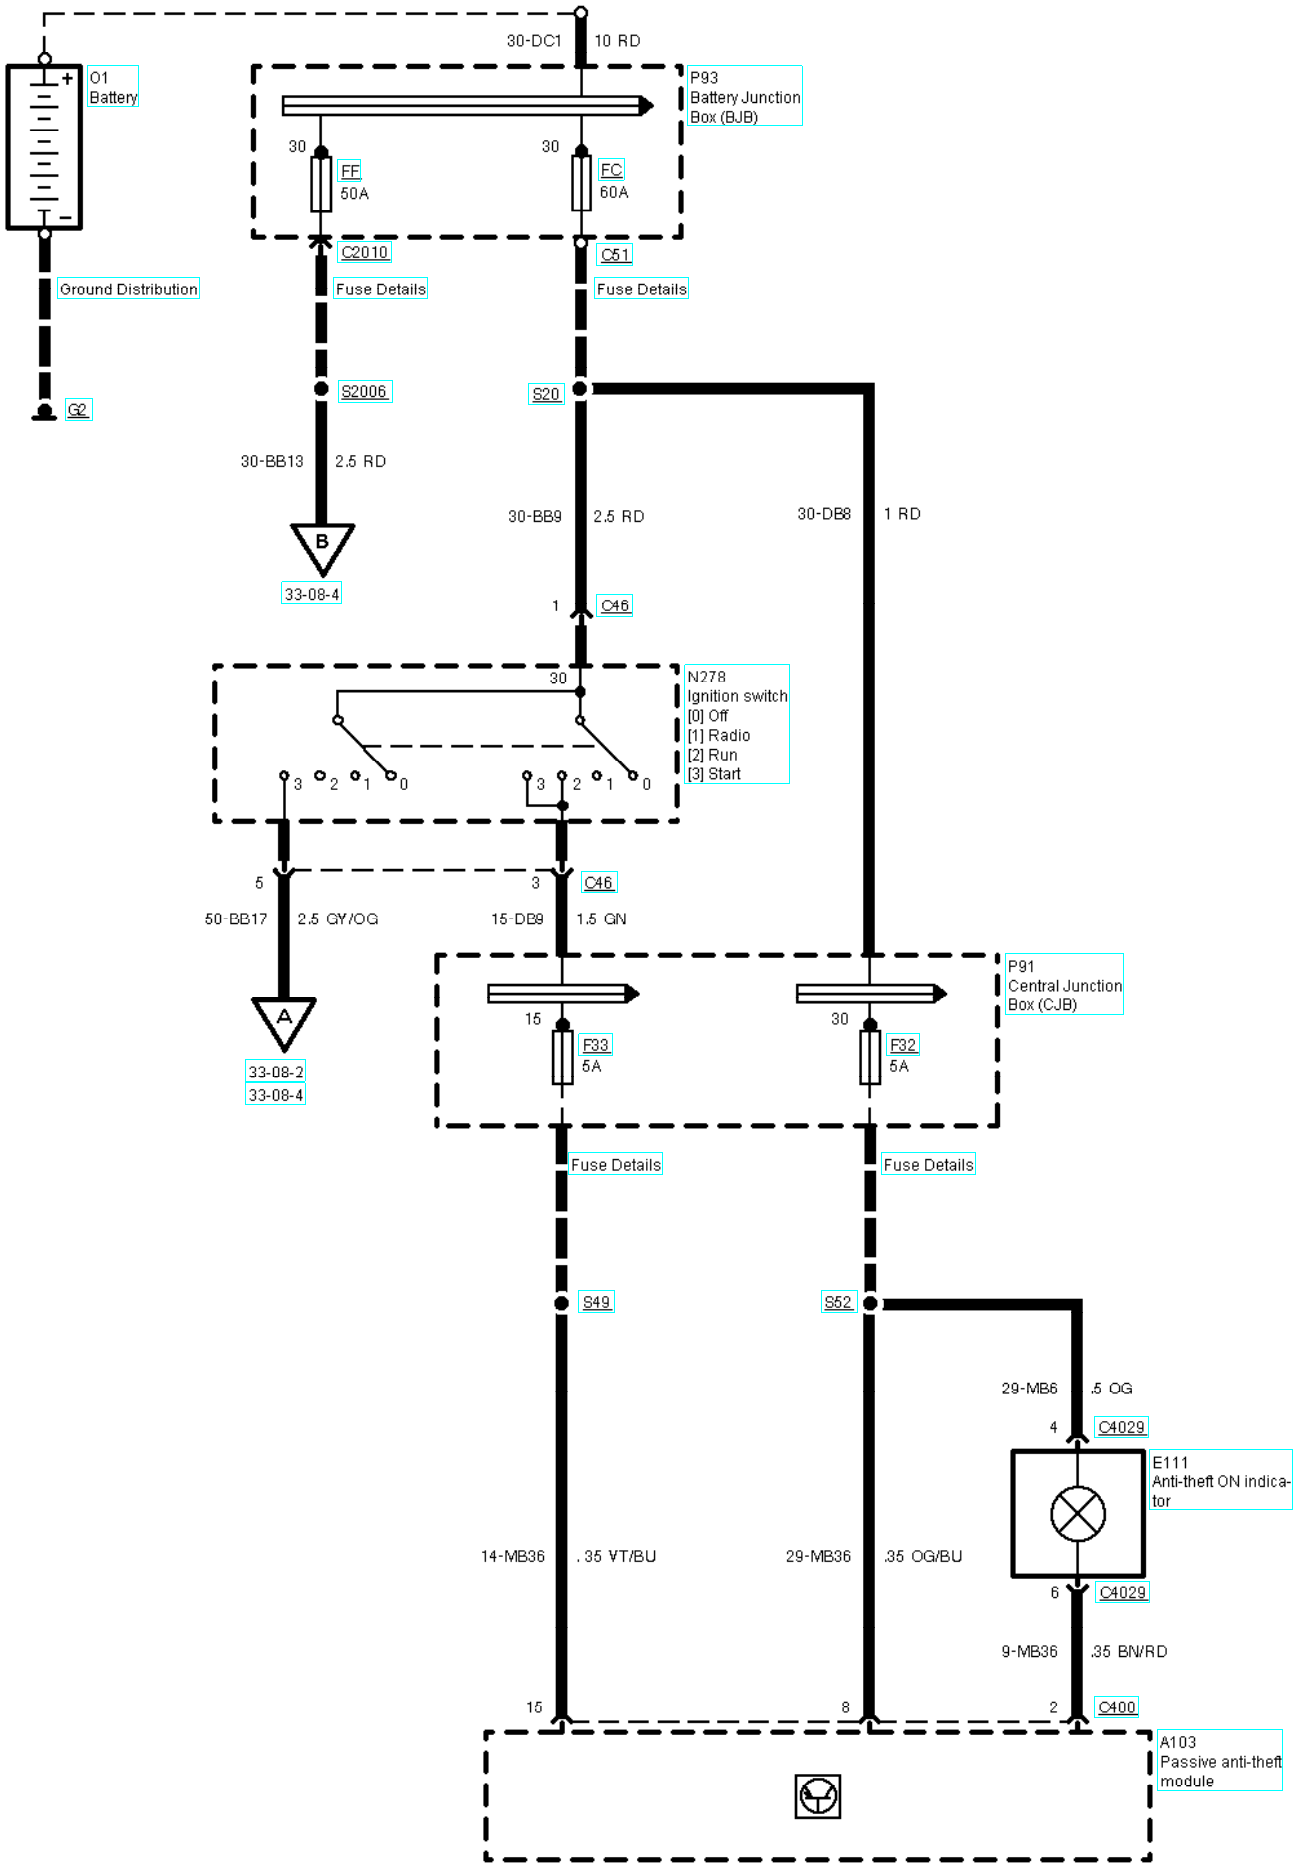
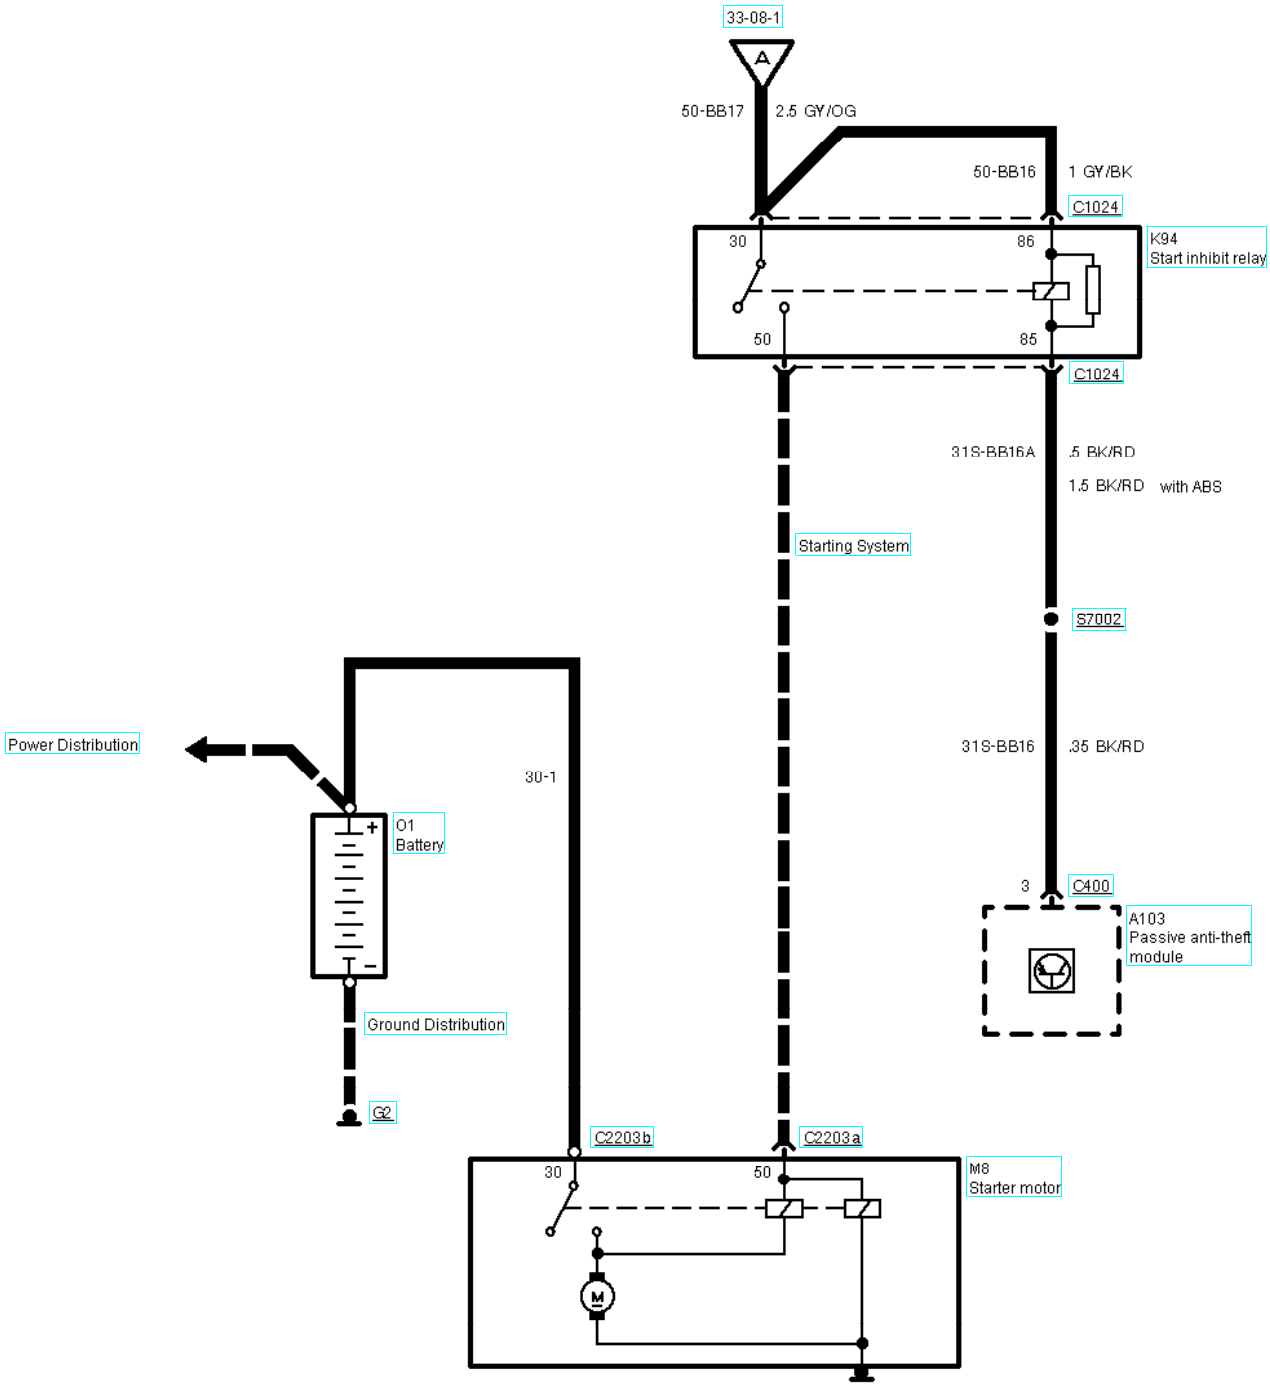
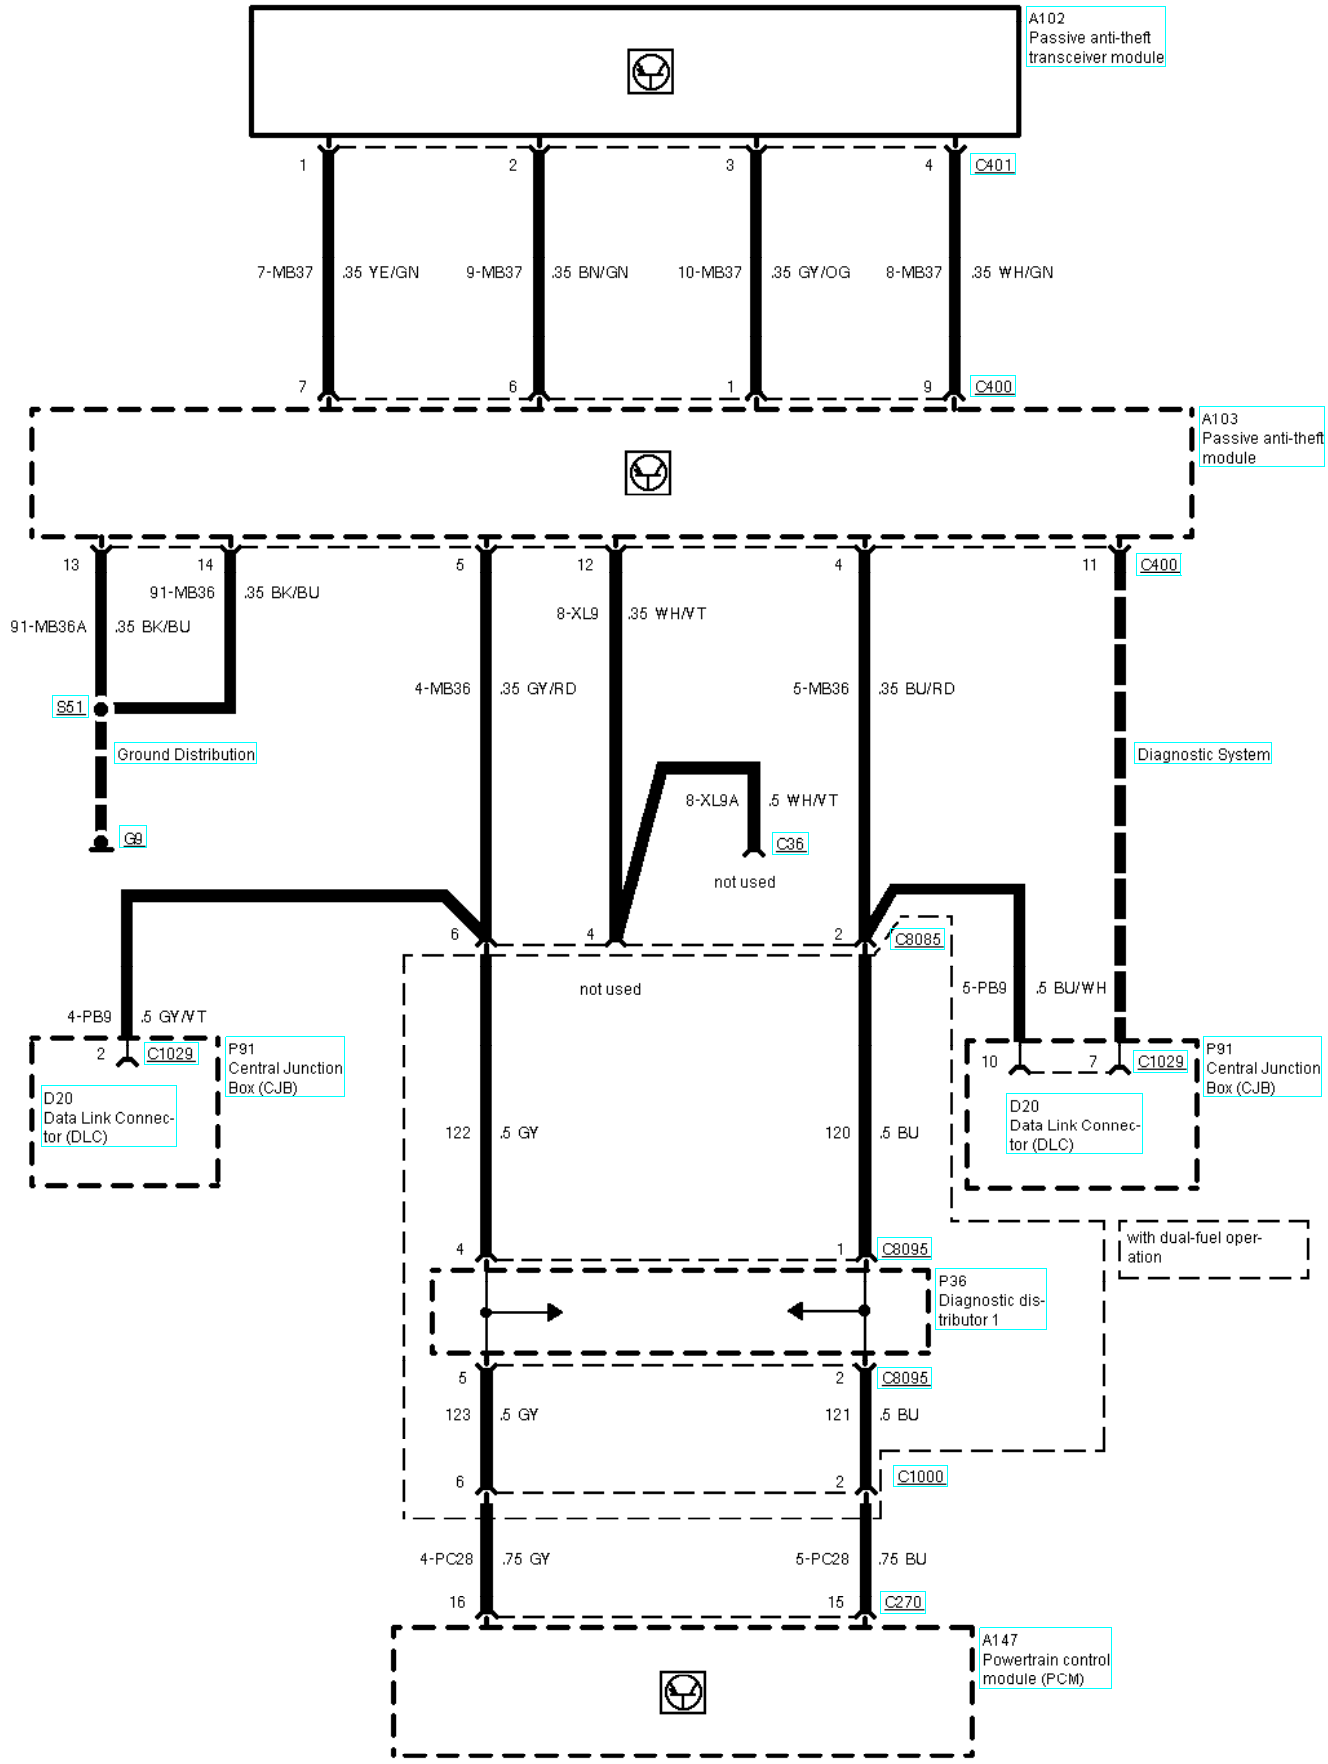

O1
Battery
Ground Distribution
G2
30-DC1
10 RD
P93
Battery Junction
Box (BJB)
30
FF
50A
30
FC
60A
C2010
Fuse Details
C51
Fuse Details
S2006
S20
30-BB13
2.5 RD
B
33-08-4
30-BB9
2.5 RD
30-DB8
1 RD
1
C46
30
N278
Ignition switch
[0] Off
[1] Radio
[2] Run
[3] Start
3 2 1 0
3 2 1 0
5
3
C46
50-BB17
2.5 GY/OG
15-DB9
1.5 GN
A
33-08-2
33-08-4
P91
Central Junction
Box (CJB)
15
F33
5A
30
F32
5A
Fuse Details
Fuse Details
S49
S52
29-MB6
.5 OG
4
C4029
E111
Anti-theft ON indica-
tor
14-MB36
.35 VT/BU
29-MB36
.35 OG/BU
6
C4029
9-MB36
.35 BN/RD
15
8
2
C400
A103
Passive anti-theft
module


DOHC


33-08-1
A
50-BB17
2.5 GY/OG
50-BB16
1 GY/BK
C1024
30
86
K94
Start inhibit relay
50
85
C1024
31S-BB16A
.5 BK/RD
1.5 BK/RD
with ABS
Starting System
S7002
31S-BB16
.35 BK/RD
3
C400
A103
Passive anti-theft module
Power Distribution
30-1
O1
Battery
Ground Distribution
G2
C2203b
C2203a
30
50
M8
Starter motor
M


DOHC


A102
Passive anti-theft transceiver module
1
2
3
4
C401
7-MB37
.35 YE/GN
9-MB37
.35 BN/GN
10-MB37
.35 GY/OG
8-MB37
.35 WH/GN
7
6
1
9
C400
A103
Passive anti-theft module
13
14
91-MB36
.35 BK/BU
91-MB36A
.35 BK/BU
S51
Ground Distribution
G9
5
12
8-XL9
.35 WH/VT
4-MB36
.35 GY/RD
8-XL9A
.5 WH/VT
C36
not used
4
11
C400
5-MB36
.35 BU/RD
Diagnostic System
6
4
2
C8085
not used
4-PB9
.5 GY/VT
2
C1029
P91
Central Junction Box (CJB)
D20
Data Link Connector (DLC)
5-PB9
.5 BU/WH
10
7
C1029
P91
Central Junction Box (CJB)
D20
Data Link Connector (DLC)
122
.5 GY
120
.5 BU
4
1
C8095
with dual-fuel operation
P36
Diagnostic distributor 1
5
2
C8095
123
.5 GY
121
.5 BU
6
2
C1000
4-PC28
.75 GY
5-PC28
.75 BU
16
15
C270
A147
Powertrain control module (PCM)


Diesel engines without automatic clutch

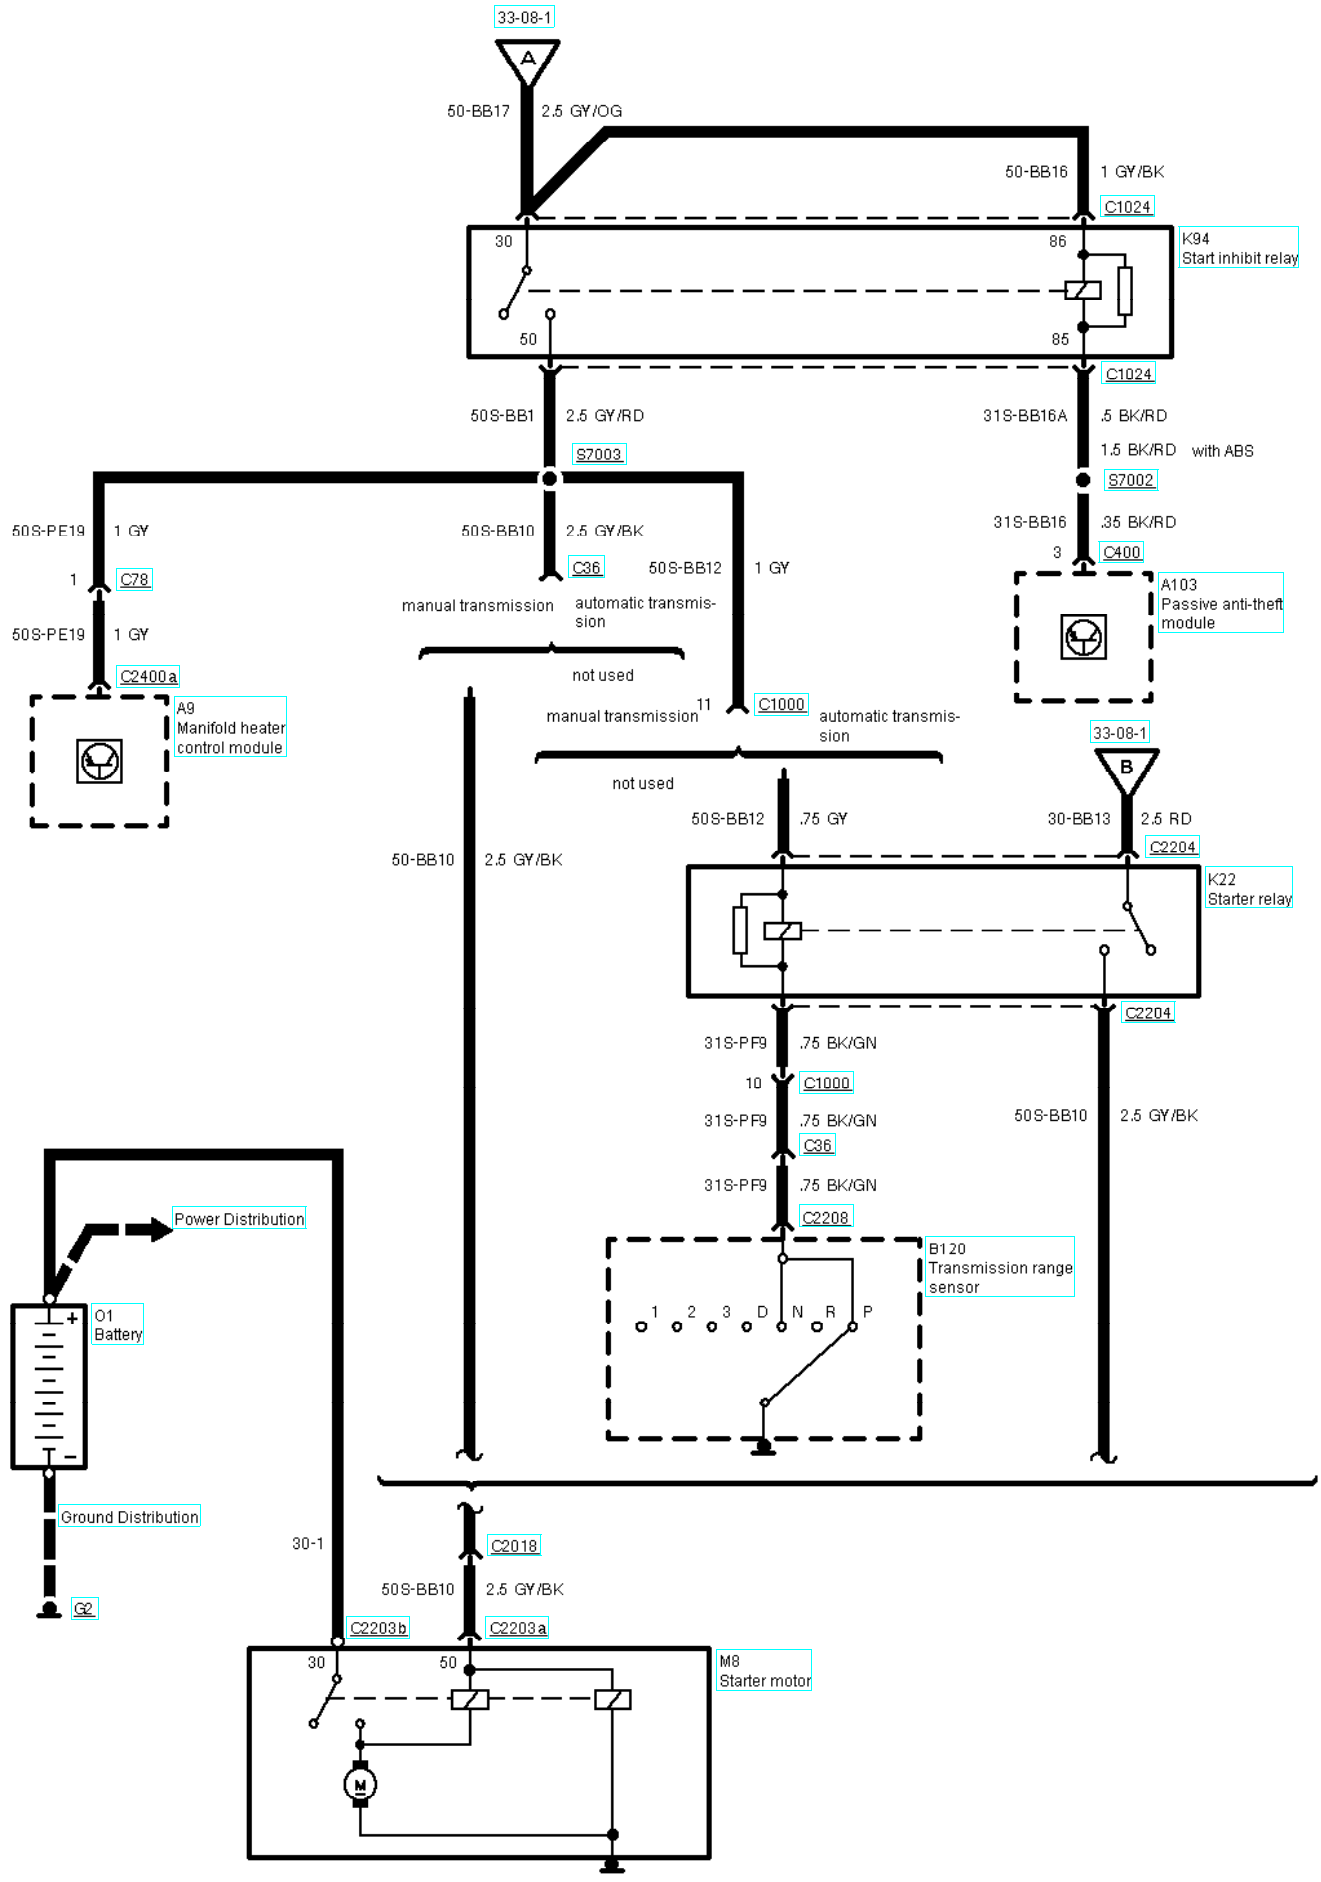

Diesel engines with automatic clutch

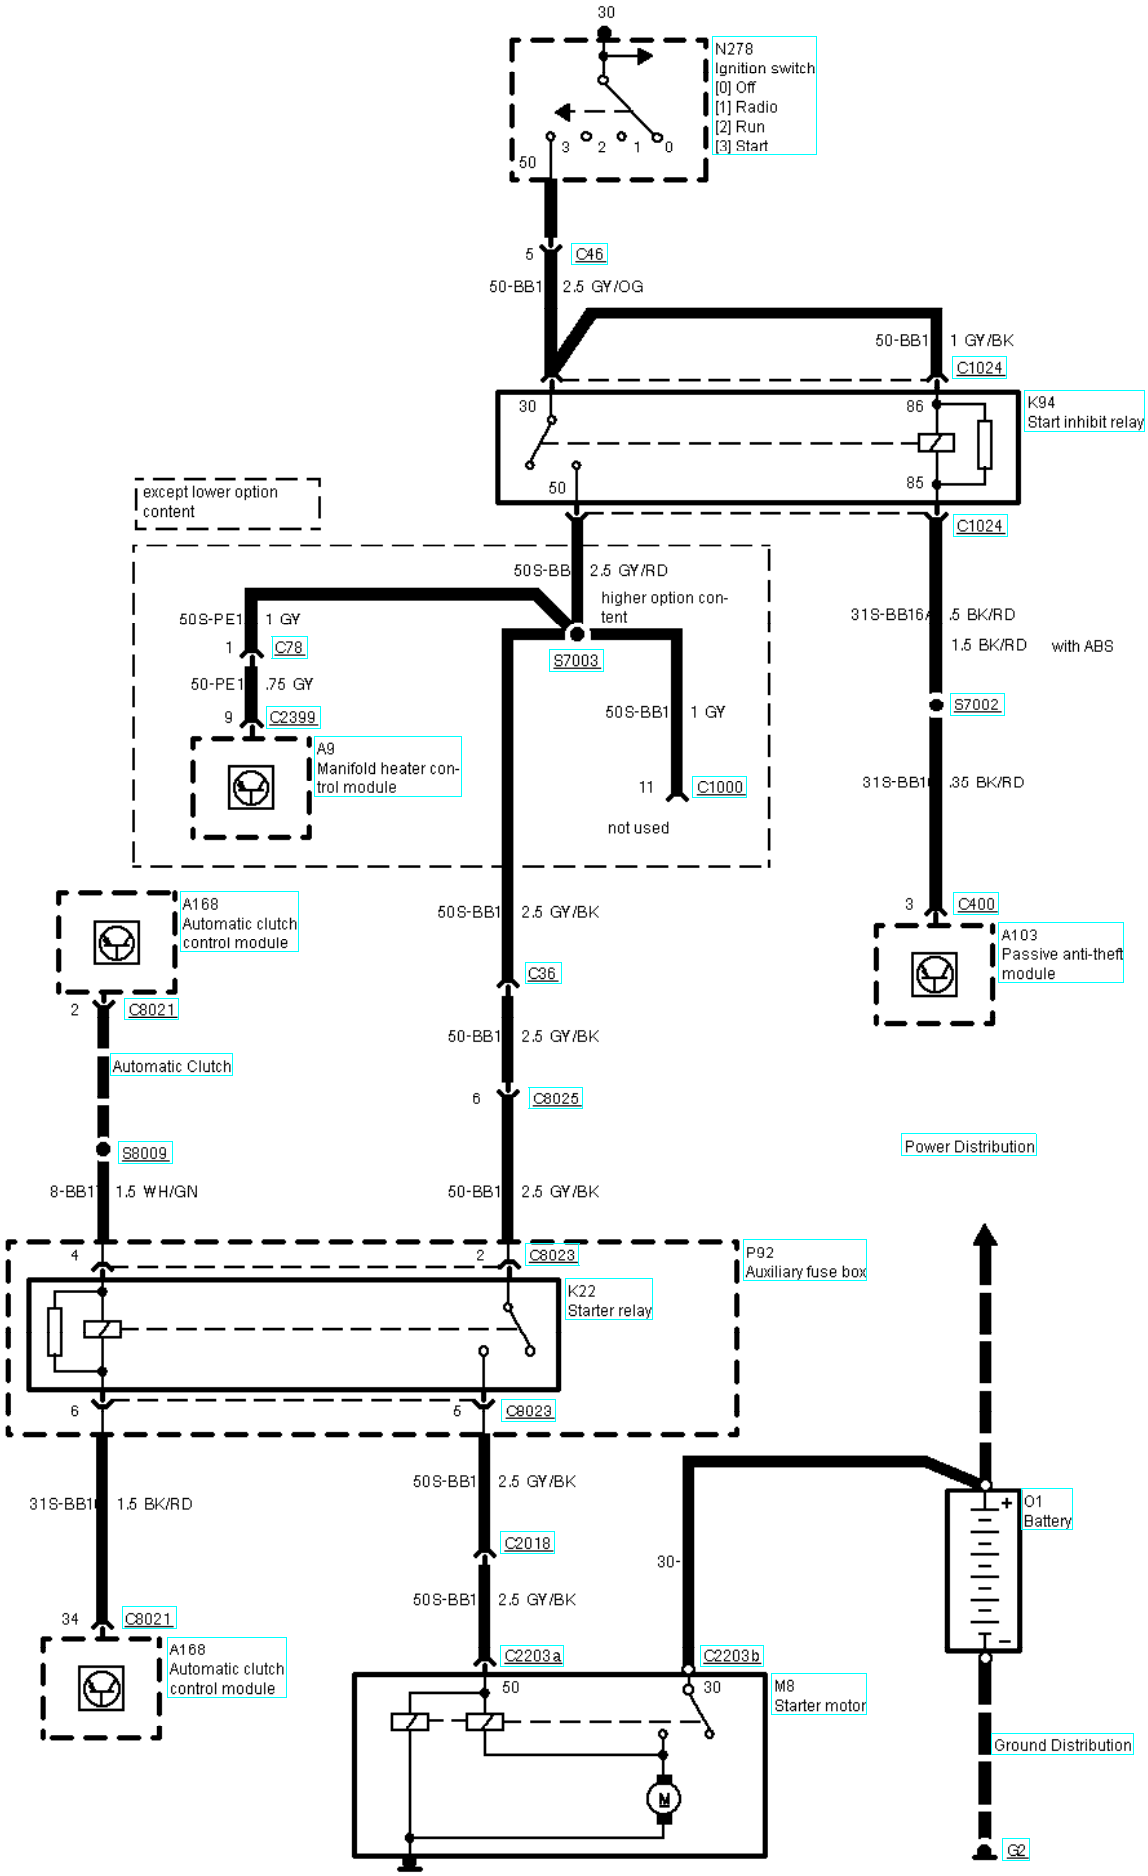

Turbo Diesel

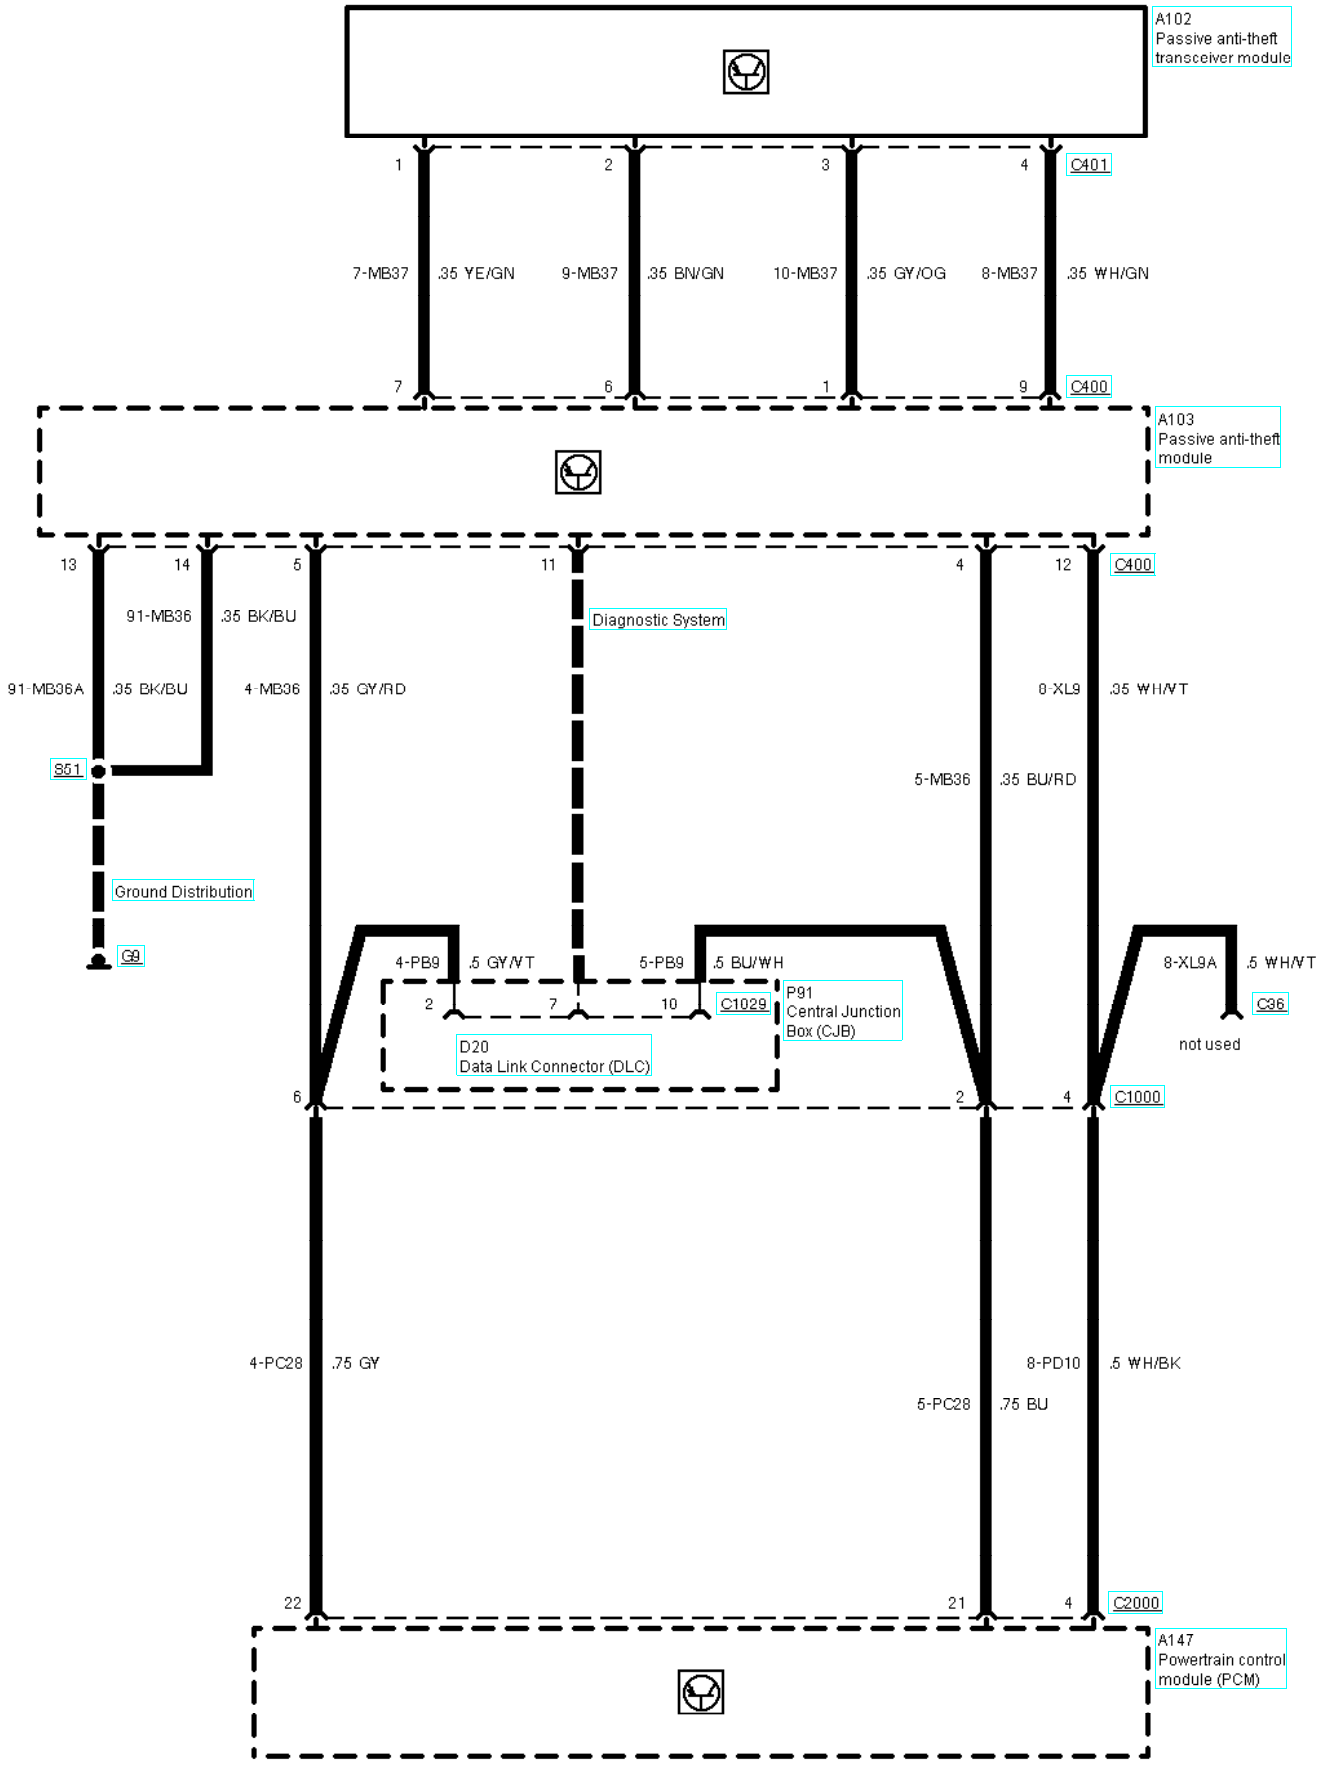

Diesel engines

