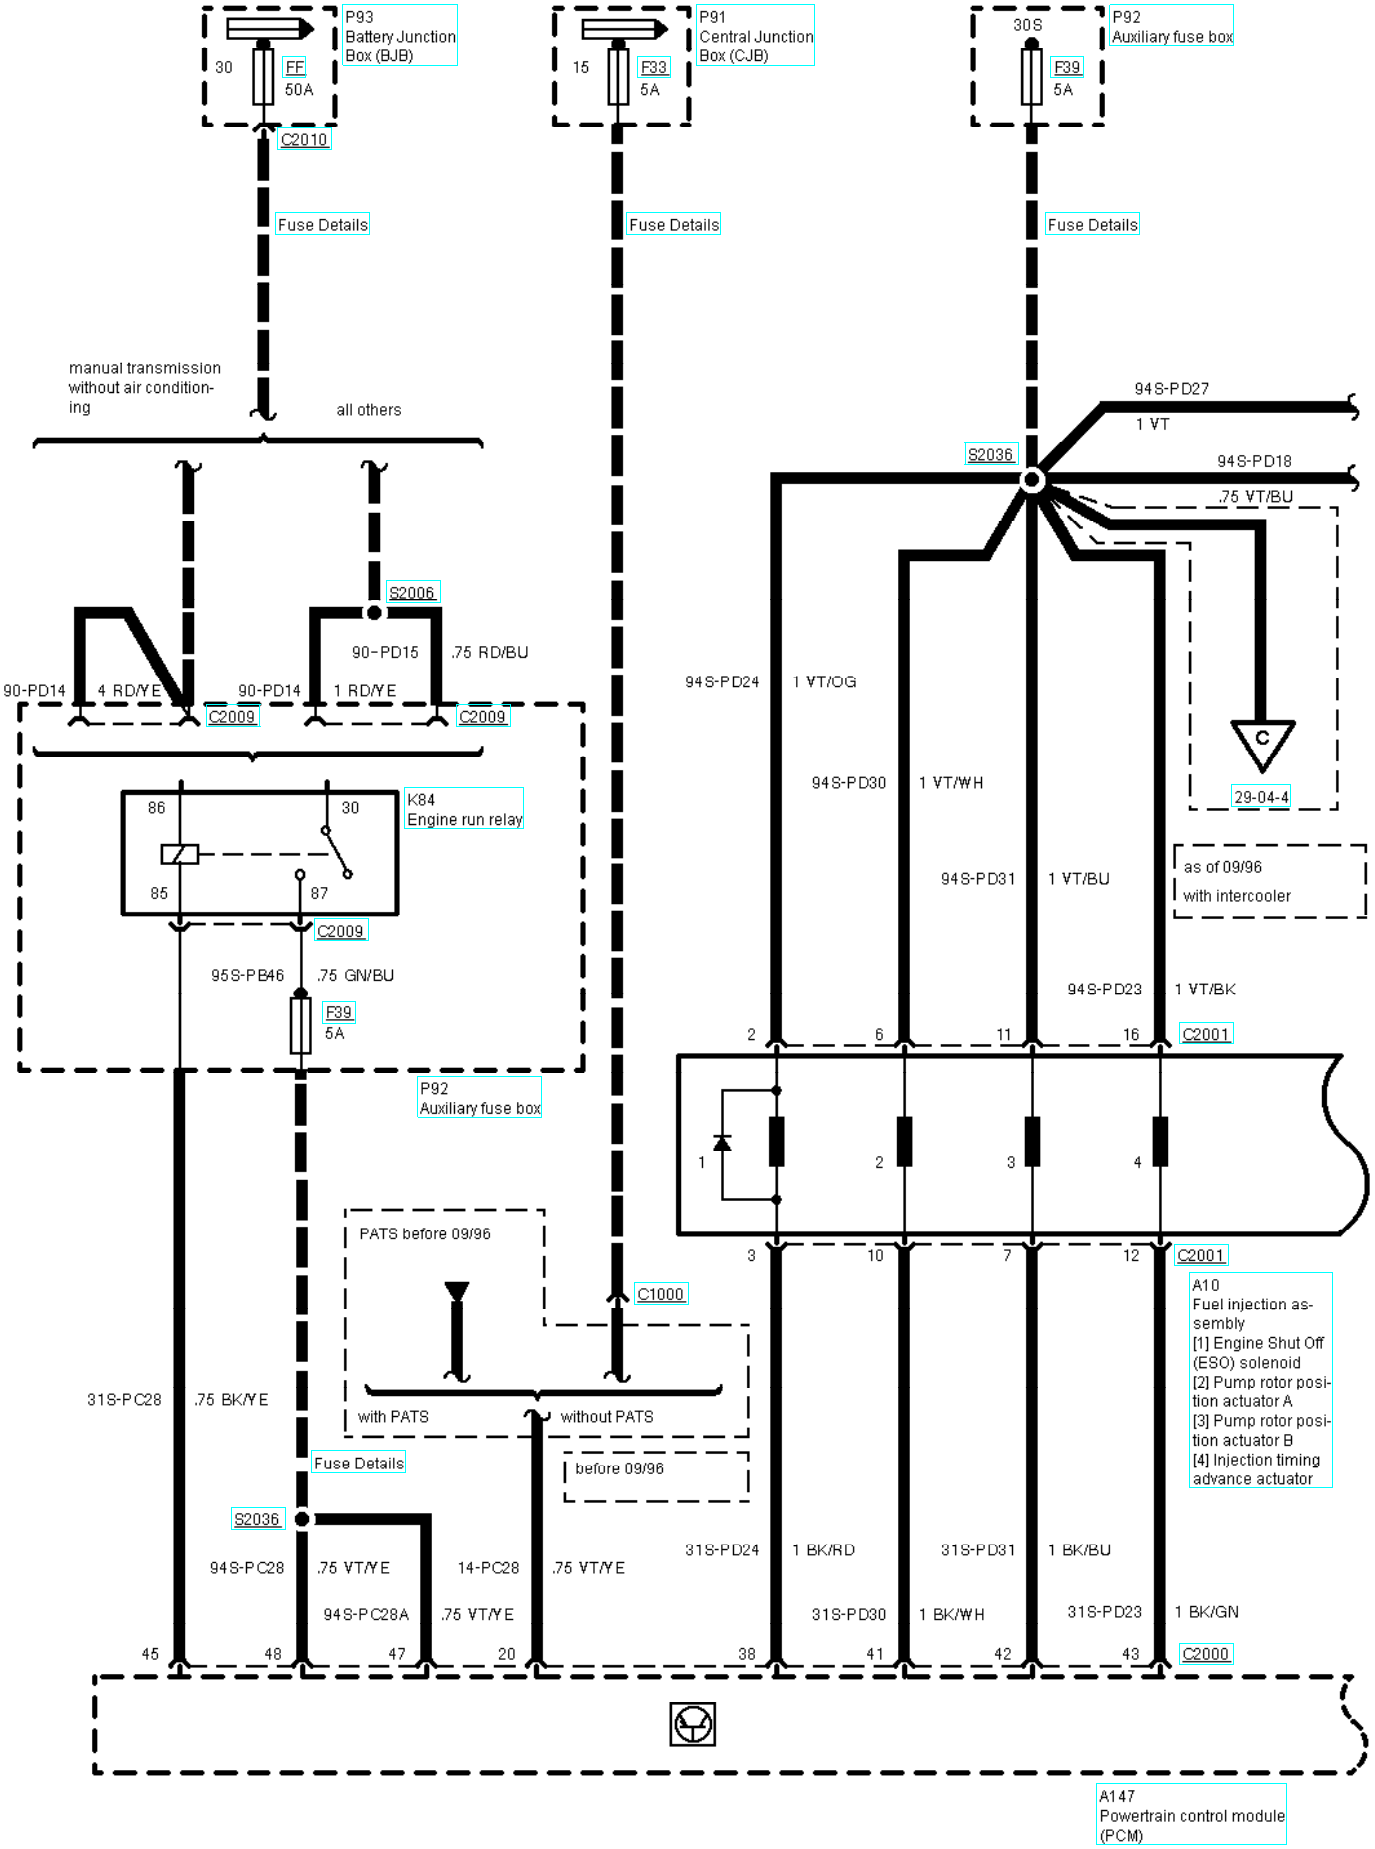
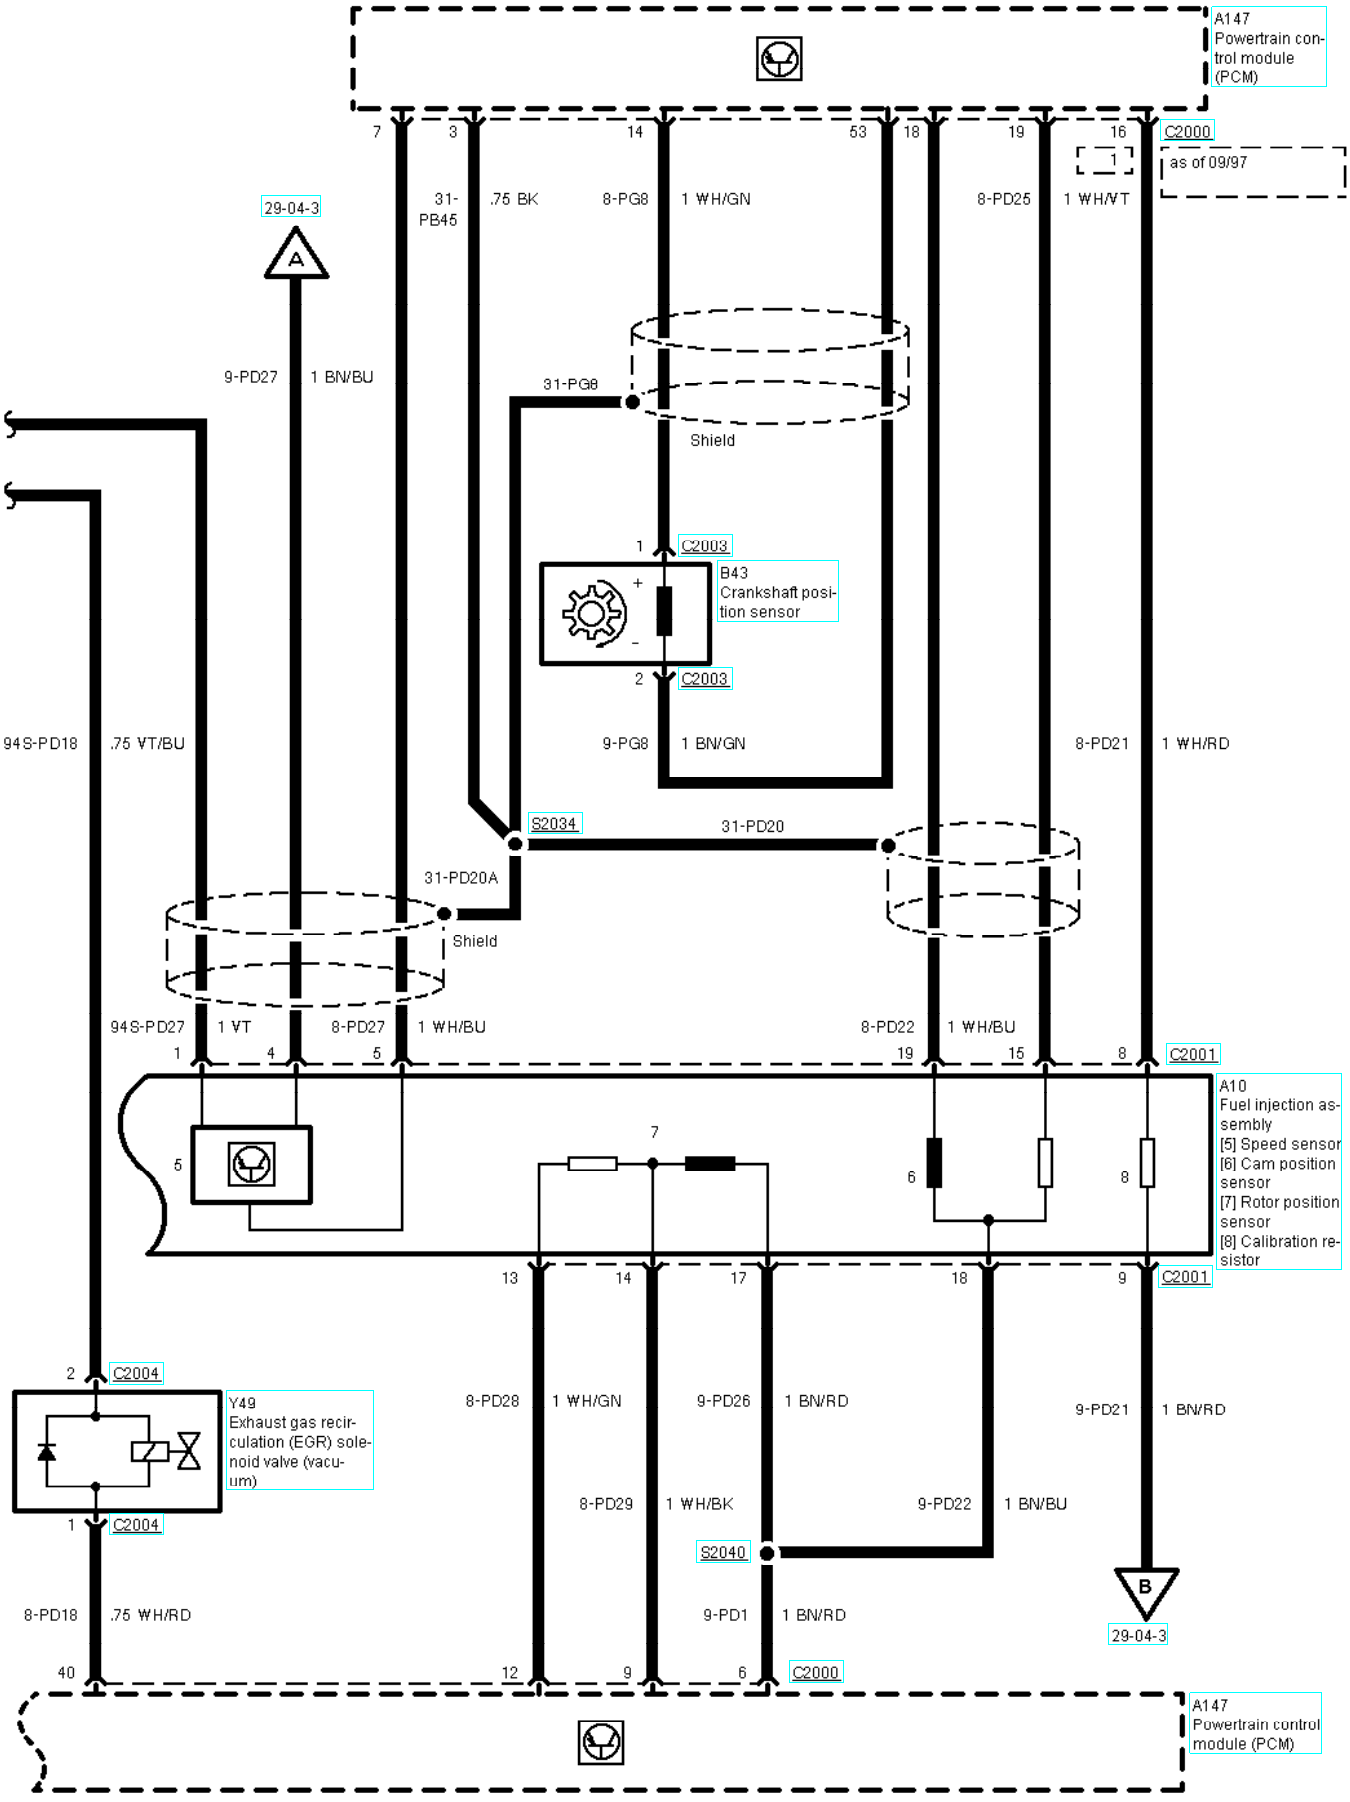
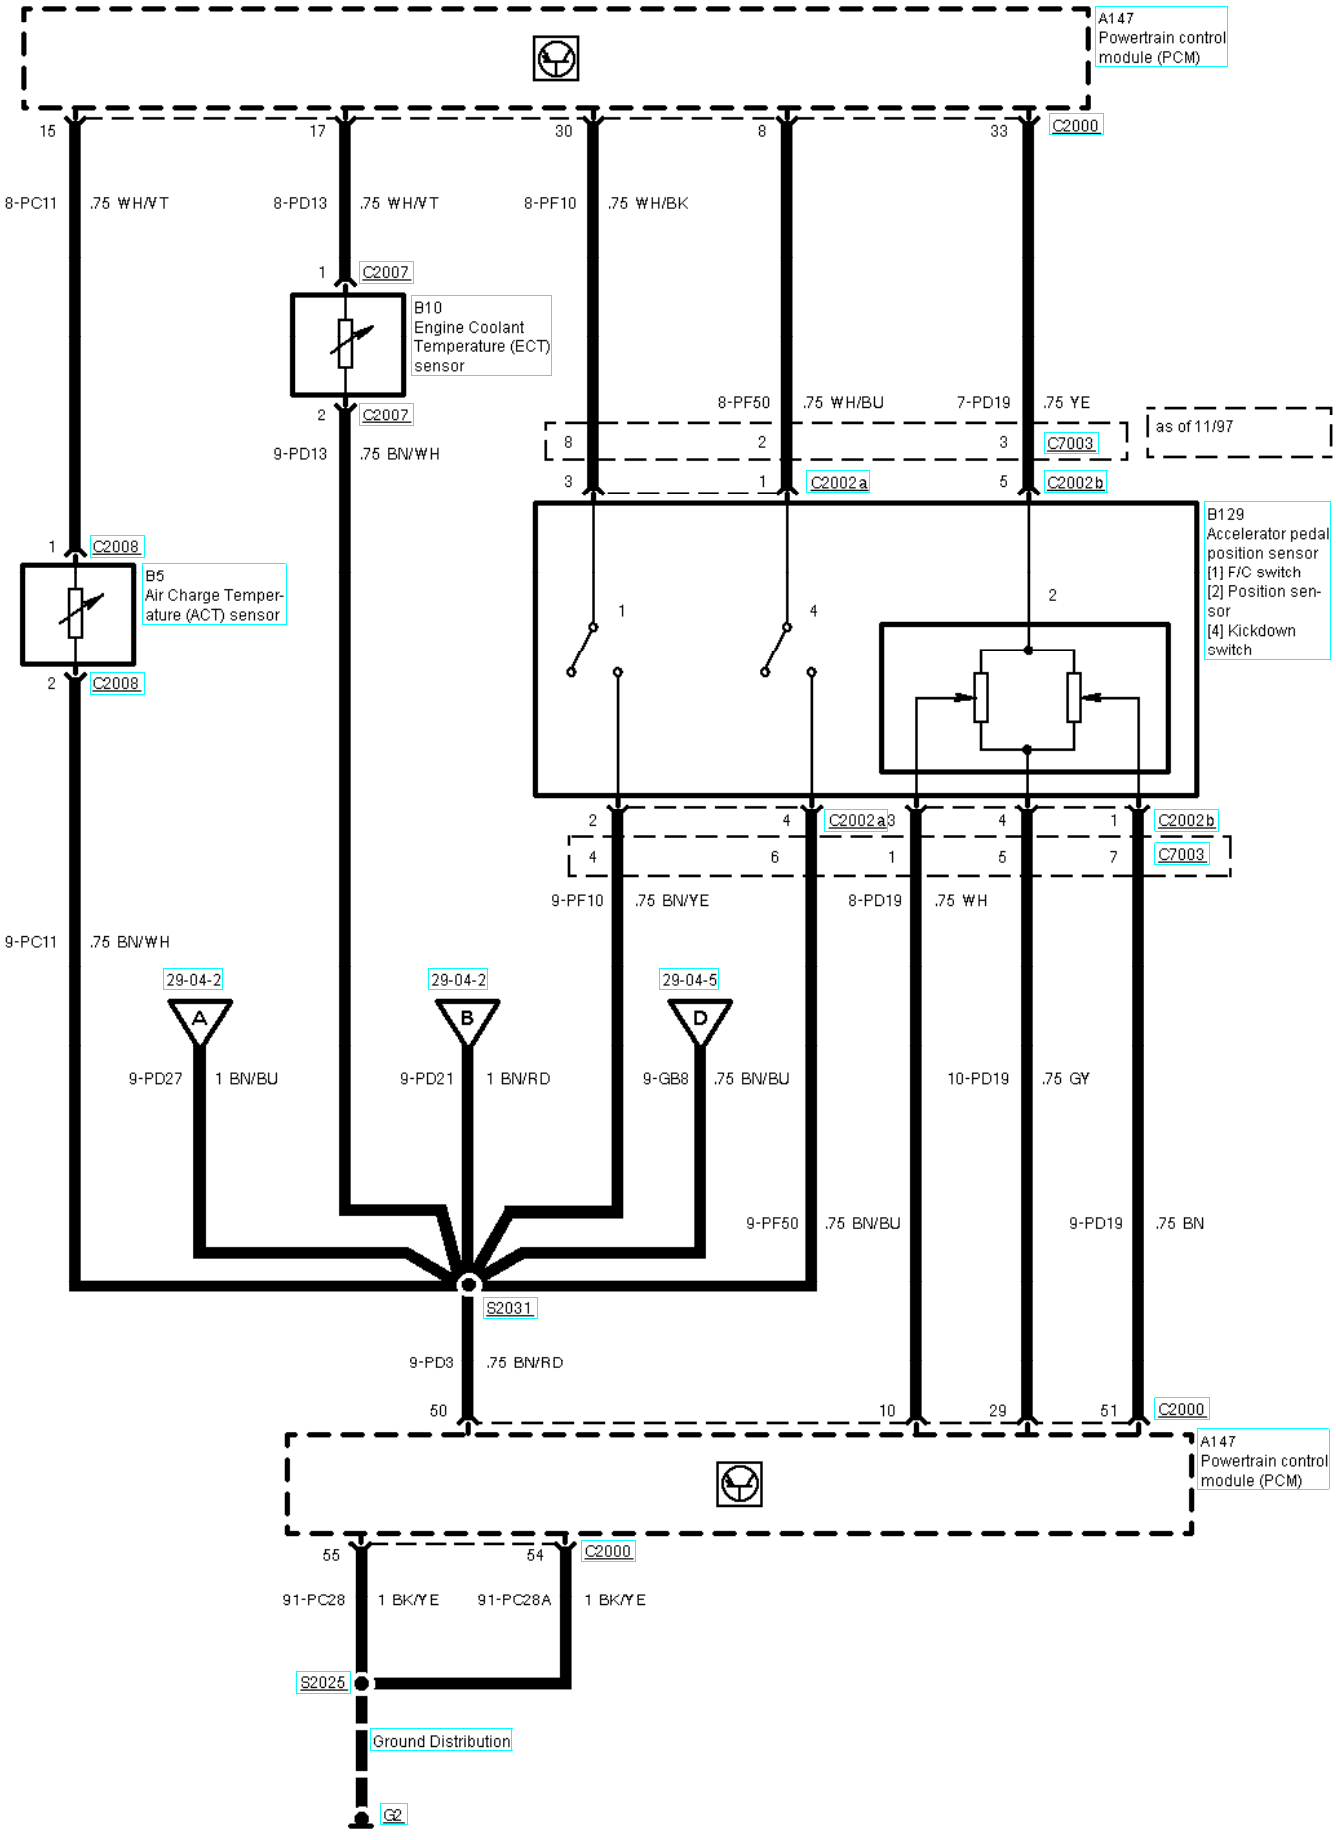
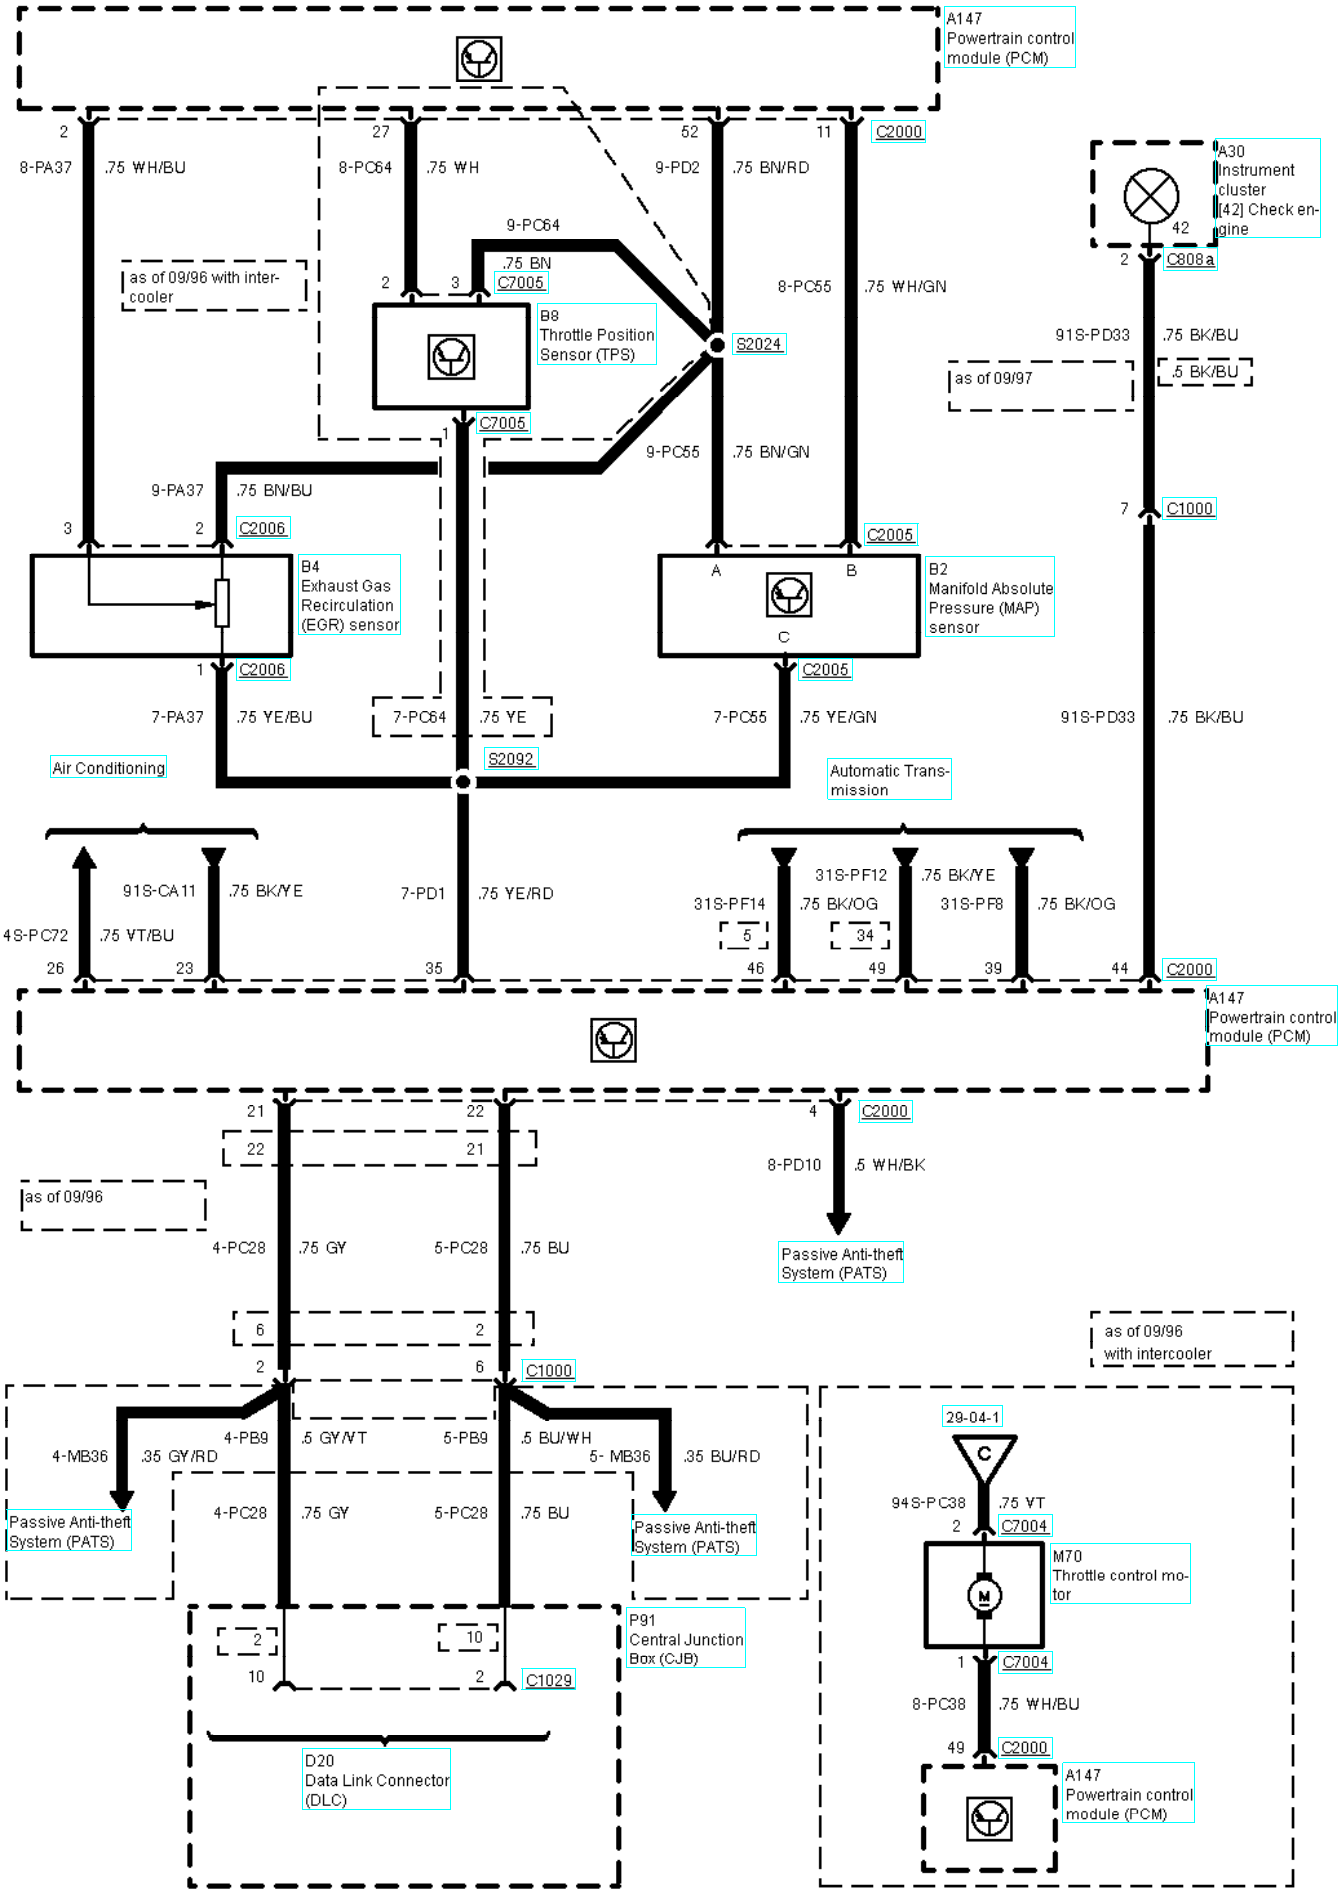
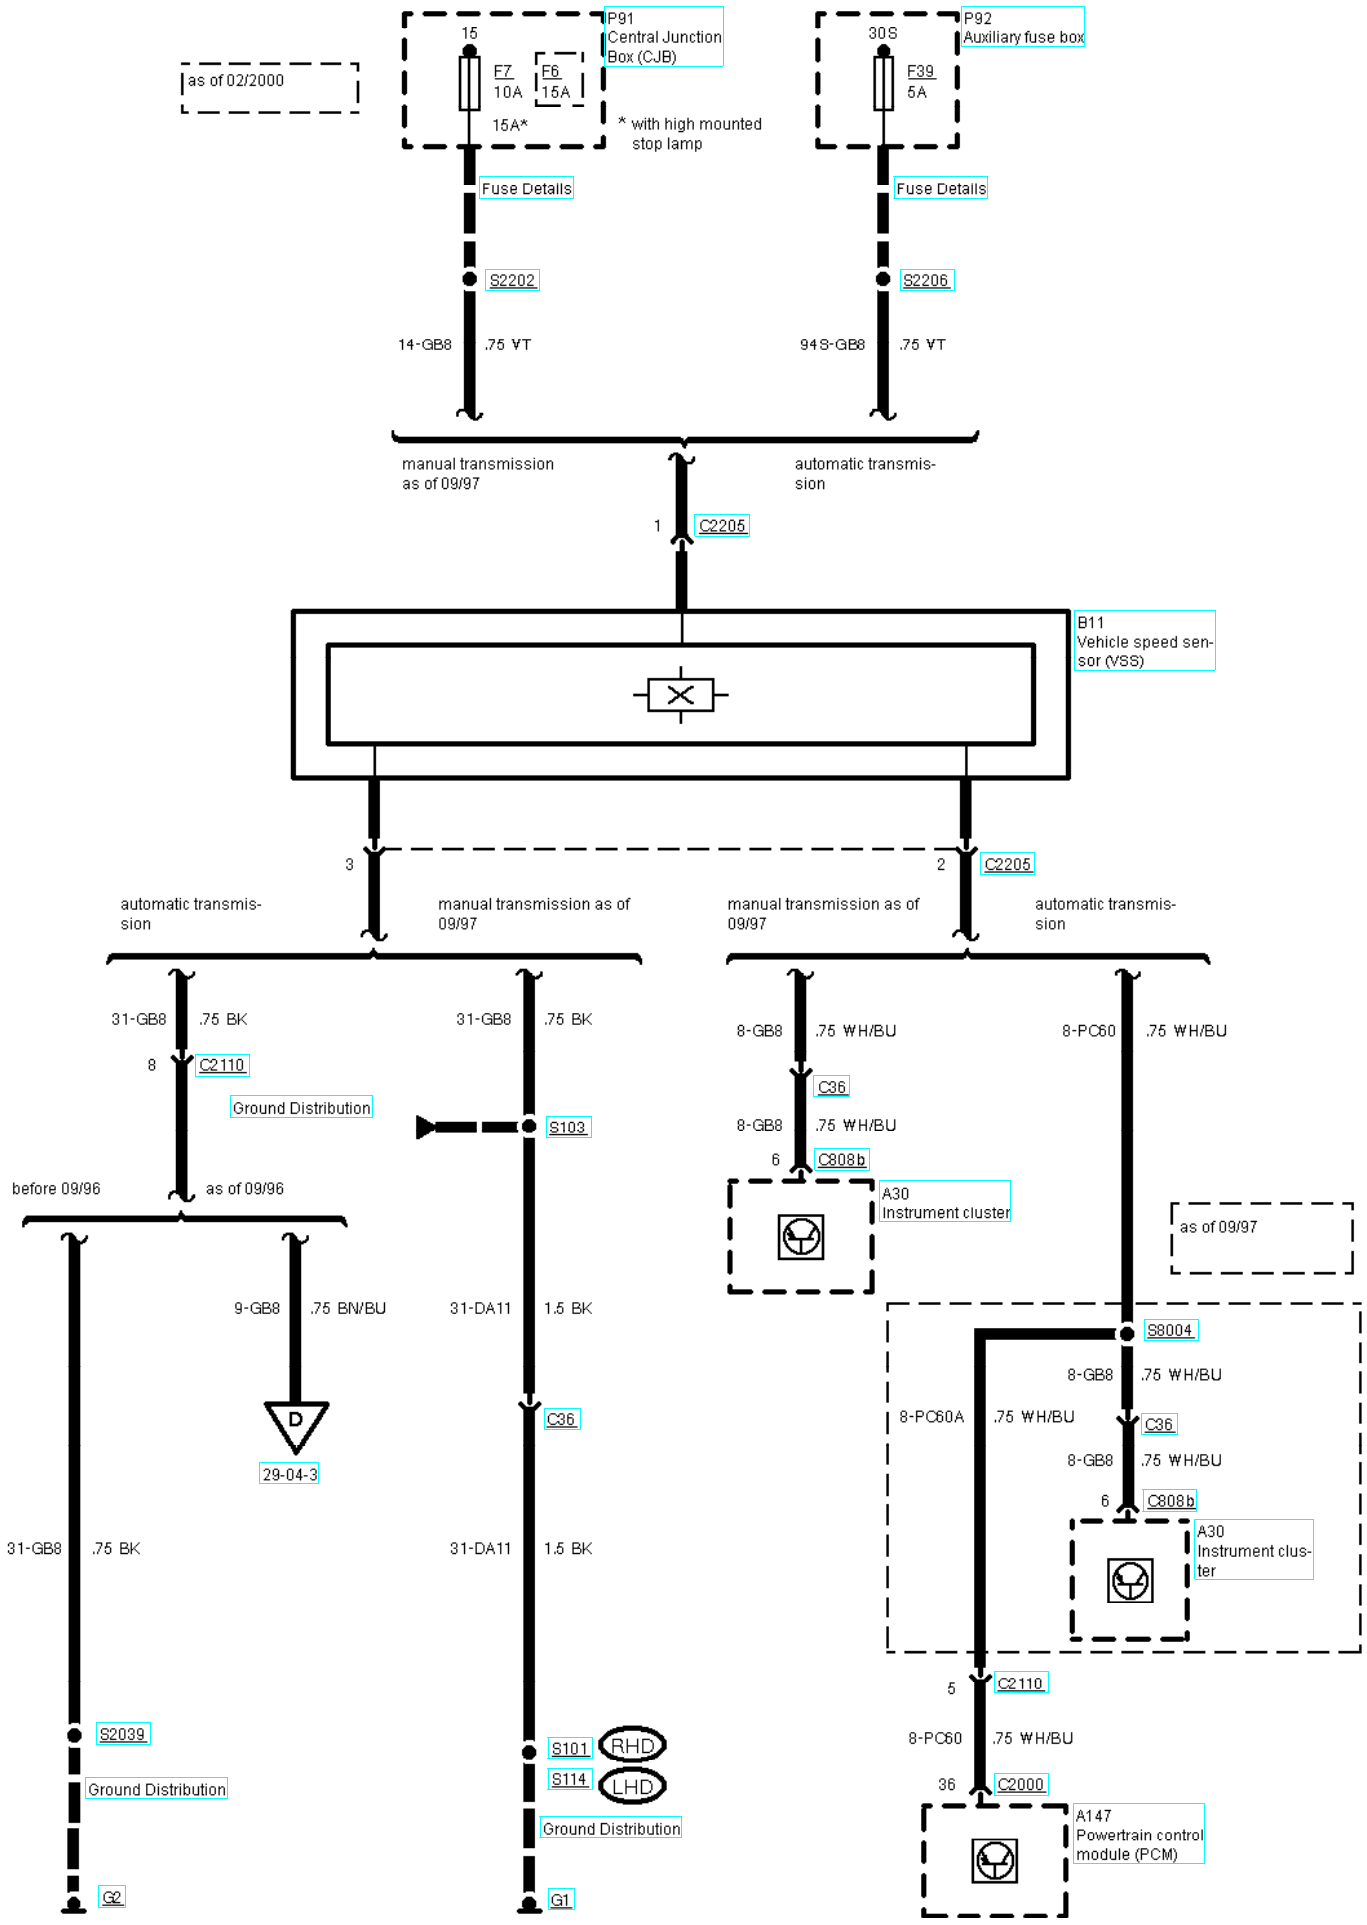

P93
Battery Junction Box (BJB)
30
FF
50A
C2010
Fuse Details
P91
Central Junction Box (CJB)
15
F33
5A
Fuse Details
30S
P92
Auxiliary fuse box
F39
5A
Fuse Details
manual transmission without air condition-ing
all others
S2006
90-PD15
.75 RD/BU
90-PD14
4 RD/YE
90-PD14
1 RD/YE
C2009
C2009
86
30
85
87
K84
Engine run relay
C2009
95S-PB46
.75 GN/BU
F39
5A
P92
Auxiliary fuse box
94S-PD27
1 VT
S2036
94S-PD18
.75 VT/BU
C
29-04-4
94S-PD24
1 VT/OG
94S-PD30
1 VT/WH
94S-PD31
1 VT/BU
as of 09/96
with intercooler
94S-PD23
1 VT/BK
2
6
11
16
C2001
1
2
3
4
3
10
7
12
C2001
A10
Fuel injection as-sembly
[1] Engine Shut Off (ESO) solenoid
[2] Pump rotor posi-tion actuator A
[3] Pump rotor posi-tion actuator B
[4] Injection timing advance actuator
PATS before 09/96
C1000
31S-PC28
.75 BK/YE
with PATS
without PATS
Fuse Details
before 09/96
S2036
94S-PC28
.75 VT/YE
94S-PC28A
.75 VT/YE
14-PC28
.75 VT/YE
31S-PD24
1 BK/RD
31S-PD31
1 BK/BU
31S-PD30
1 BK/WH
31S-PD23
1 BK/GN
45
48
47
20
38
41
42
43
C2000
A147
Powertrain control module (PCM)


A147
Powertrain control module (PCM)
C2000
as of 09/97
29-04-3
31-PB45
.75 BK
8-PG8
1 WH/GN
8-PD25
1 WH/VT
9-PD27
1 BN/BU
31-PG8
Shield
C2003
B43
Crankshaft position sensor
94S-PD18
.75 VT/BU
9-PG8
1 BN/GN
8-PD21
1 WH/RD
S2034
31-PD20
31-PD20A
Shield
94S-PD27
1 VT
8-PD27
1 WH/BU
8-PD22
1 WH/BU
C2001
A10
Fuel injection assembly
[5] Speed sensor
[6] Cam position sensor
[7] Rotor position sensor
[8] Calibration resistor
C2004
Y49
Exhaust gas recirculation (EGR) solenoid valve (vacuum)
8-PD28
1 WH/GN
9-PD26
1 BN/RD
9-PD21
1 BN/RD
8-PD29
1 WH/BK
9-PD22
1 BN/BU
S2040
8-PD18
.75 WH/RD
9-PD1
1 BN/RD
29-04-3
C2000
A147
Powertrain control module (PCM)


A147
Powertrain control module (PCM)
C2000
15
17
30
8
33
8-PC11 .75 WH/VT
8-PD13 .75 WH/VT
8-PF10 .75 WH/BK
1
C2007
B10
Engine Coolant Temperature (ECT) sensor
2
C2007
9-PD13 .75 BN/WH
8-PF50 .75 WH/BU
7-PD19 .75 YE
as of 11/97
8
2
3
C7003
3
1
C2002a
5
C2002b
B129
Accelerator pedal position sensor
[1] F/C switch
[2] Position sensor
[4] Kickdown switch
1
C2008
B5
Air Charge Temperature (ACT) sensor
2
C2008
1
4
2
2
4
C2002a
3
4
1
C2002b
4
6
1
5
7
C7003
9-PF10 .75 BN/YE
8-PD19 .75 WH
9-PC11 .75 BN/WH
29-04-2
A
29-04-2
B
29-04-5
D
9-PD27 1 BN/BU
9-PD21 1 BN/RD
9-GB8 .75 BN/BU
10-PD19 .75 GY
9-PF50 .75 BN/BU
9-PD19 .75 BN
S2031
9-PD3 .75 BN/RD
50
10
29
51
C2000
A147
Powertrain control module (PCM)
55
54
C2000
91-PC28 1 BK/YE
91-PC28A 1 BK/YE
S2025
Ground Distribution
G2


A147
Powertrain control module (PCM)
2
8-PA37
.75 WH/BU
27
8-PC64
.75 WH
52
9-PD2
.75 BN/RD
11
C2000
A30
Instrument cluster
[42] Check engine
42
2
C808a
as of 09/96 with intercooler
9-PC64
.75 BN
2
3
C7005
B8
Throttle Position Sensor (TPS)
S2024
8-PC55
.75 WH/GN
91S-PD33
.75 BK/BU
as of 09/97
.5 BK/BU
1
C7005
9-PC55
.75 BN/GN
9-PA37
.75 BN/BU
7
C1000
3
2
C2006
C2005
B4
Exhaust Gas Recirculation (EGR) sensor
A
B
C
B2
Manifold Absolute Pressure (MAP) sensor
1
C2006
C2005
7-PA37
.75 YE/BU
7-PC64
.75 YE
7-PC55
.75 YE/GN
91S-PD33
.75 BK/BU
Air Conditioning
S2092
Automatic Transmission
91S-CA11
.75 BK/YE
7-PD1
.75 YE/RD
31S-PF12
.75 BK/YE
31S-PF14
.75 BK/OG
31S-PF8
.75 BK/OG
4S-PC72
.75 VT/BU
5
34
26
23
35
46
49
39
44
C2000
A147
Powertrain control module (PCM)
21
22
22
21
4
C2000
8-PD10
.5 WH/BK
as of 09/96
4-PC28
.75 GY
5-PC28
.75 BU
Passive Anti-theft System (PATS)
6
2
2
6
C1000
as of 09/96 with intercooler
4-MB36
.35 GY/RD
4-PB9
.5 GY/VT
5-PB9
.5 BU/WH
5- MB36
.35 BU/RD
29-04-1
C
94S-PC38
.75 VT
2
C7004
M70
Throttle control motor
M
1
C7004
8-PC38
.75 WH/BU
49
C2000
A147
Powertrain control module (PCM)
Passive Anti-theft System (PATS)
4-PC28
.75 GY
5-PC28
.75 BU
Passive Anti-theft System (PATS)
2
10
10
2
C1029
P91
Central Junction Box (CJB)
D20
Data Link Connector (DLC)


as of 02/2000
15
F7
10A
F6
15A
15A*
P91
Central Junction Box (CJB)
* with high mounted stop lamp
30S
F39
5A
P92
Auxiliary fuse box
Fuse Details
Fuse Details
S2202
S2206
14-GB8 .75 VT
94S-GB8 .75 VT
manual transmission as of 09/97
automatic transmis-sion
1
C2205
B11
Vehicle speed sen-sor (VSS)
3
2
C2205
automatic transmis-sion
manual transmission as of 09/97
manual transmission as of 09/97
automatic transmis-sion
31-GB8 .75 BK
8
C2110
Ground Distribution
31-GB8 .75 BK
S103
8-GB8 .75 WH/BU
C36
8-GB8 .75 WH/BU
6
C808b
A30
Instrument cluster
8-PC60 .75 WH/BU
as of 09/97
before 09/96
as of 09/96
9-GB8 .75 BN/BU
D
29-04-3
31-DA11 1.5 BK
C36
S8004
8-GB8 .75 WH/BU
8-PC60A .75 WH/BU
C36
8-GB8 .75 WH/BU
6
C808b
A30
Instrument clus-ter
31-GB8 .75 BK
31-DA11 1.5 BK
S2039
Ground Distribution
S101
RHD
S114
LHD
Ground Distribution
5
C2110
8-PC60 .75 WH/BU
36
C2000
A147
Powertrain control module (PCM)
G2
G1